

STANDARD TECHNICAL INSTRUCTIONS

Mounting Rail Profiles











Mounting Rail
Direct

Domestic Rail 35x26mm

40x40

40x60

Common Components



Fixed Connector MRD




Fixed Connector Domestic



Fixed Connector 40x40, 40x60, 40x80



Flexible Connector

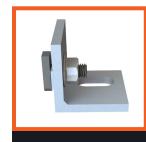

Cross Connector



Cross Connector CR



Corner Clamp



Middle Clamp



Clamp XL

R3 Bourton Industrial Park, Bourton on the Water, Glos, GL54 2HQ, UK

Tel: +44 1451 824 312

Email: info@sunfixings.co.uk

WWW.SUNFIXINGS.CO.UK


V07202







Insert the T Bolt into the relevant channel of the Mounting Rail.

Lock it into place by turning the T Bolt clockwise until the line in the bottom of the thread crosses the direction of the Mounting Rail.

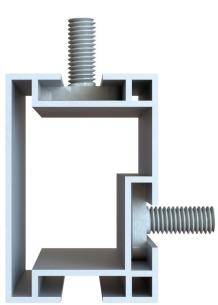


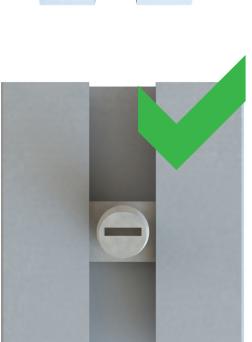

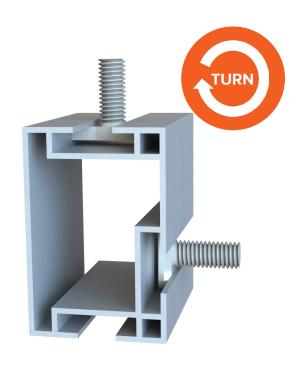




Installing Fixed Connectors

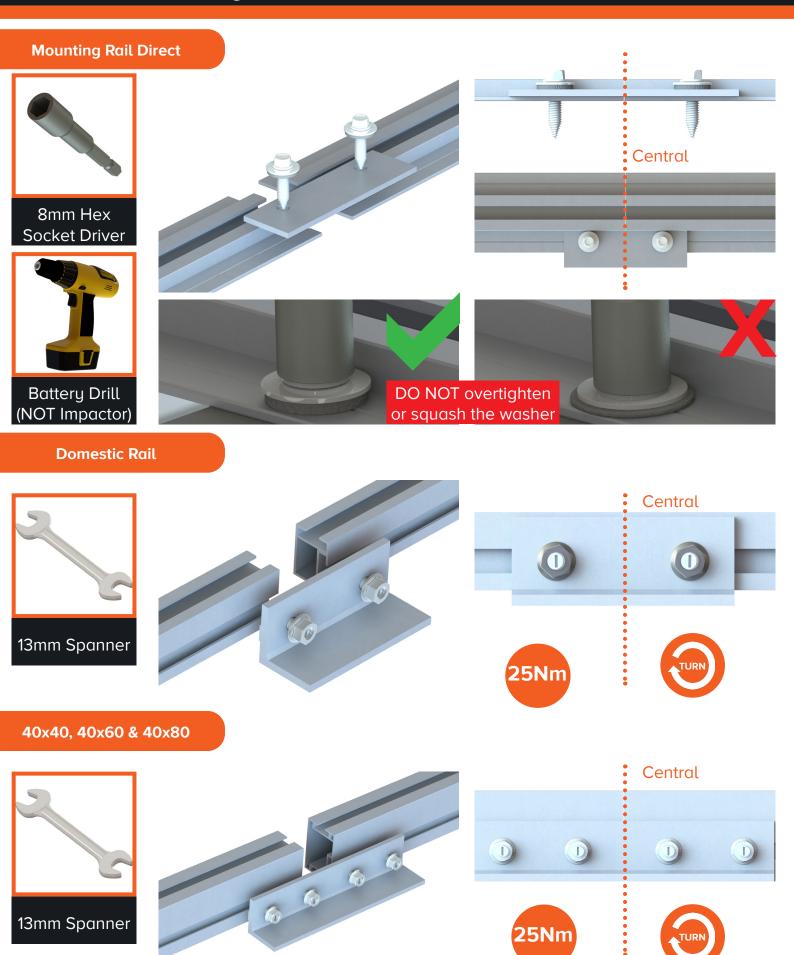

Installing the Flexible Connector

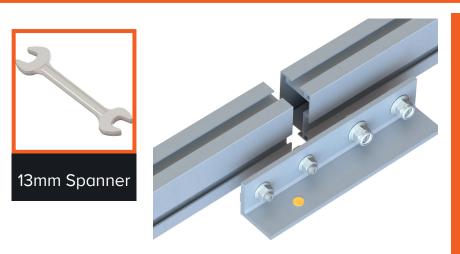



The Flexible Connector is identified by the orange circle.

Leave a 20mm gap between the Mounting Rails.

Position the Flexible Connector centrally over the 20mm gap.

Flexible Connectors are ONLY used for 40x40, 40x60 & 40x80.

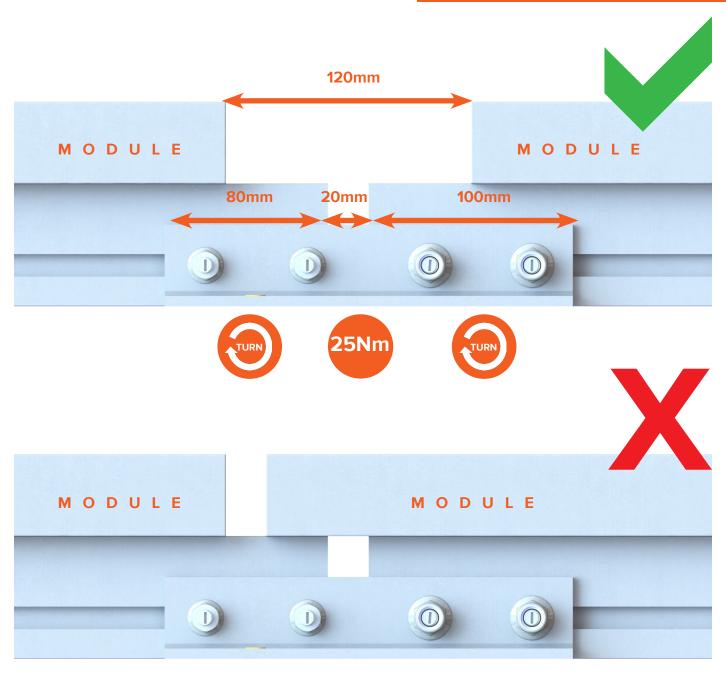

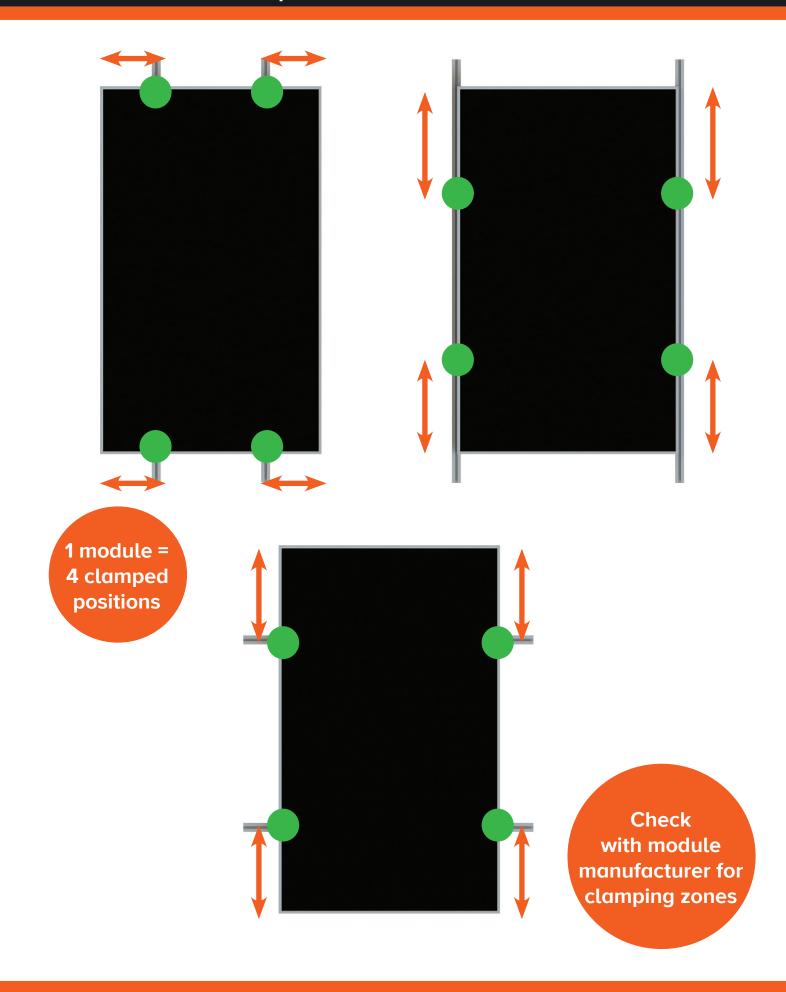








Adjust the height of the Corner Clamp to match the depth of the module by clicking it up or down.







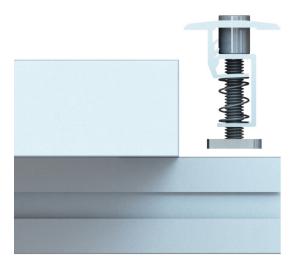


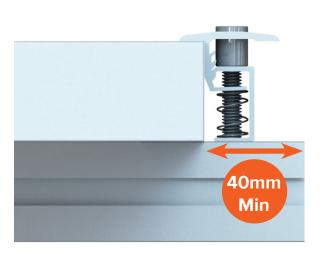


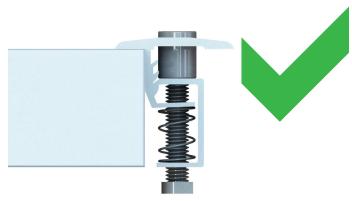

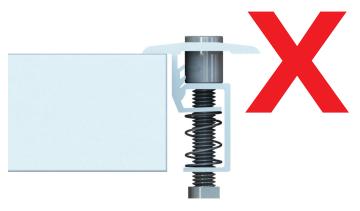

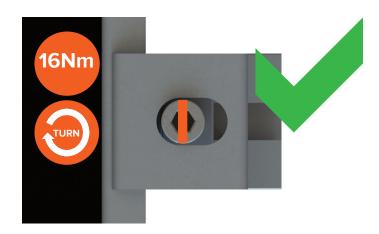

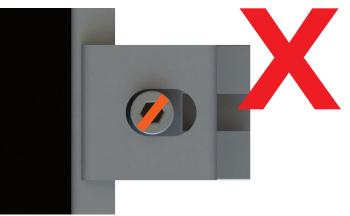

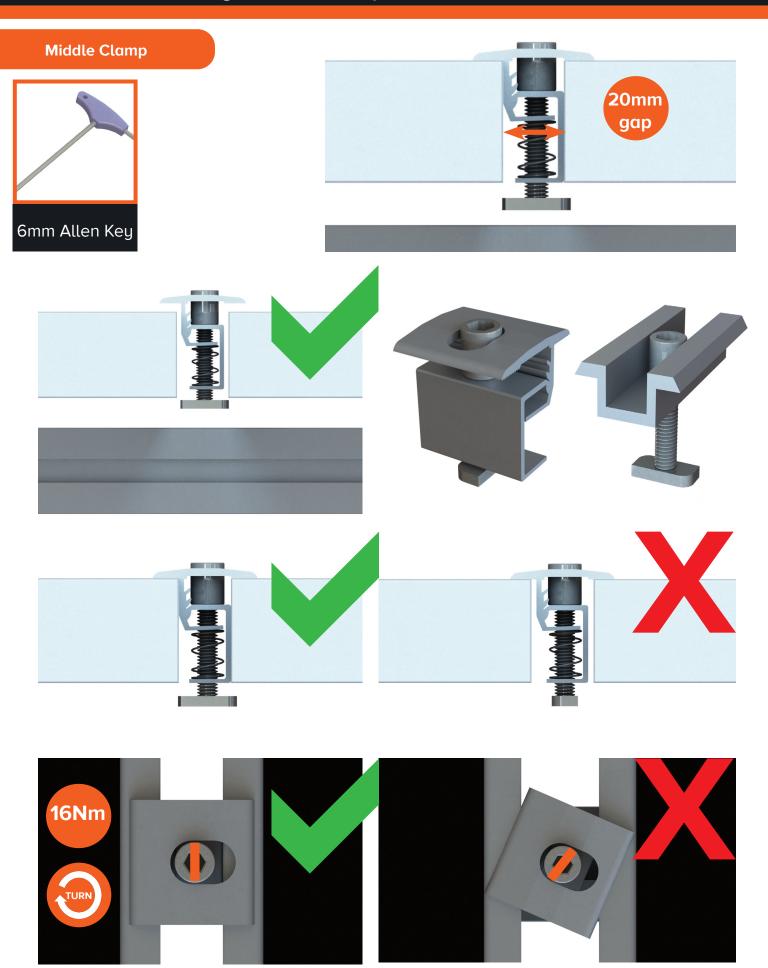


DO NOT use Impactors for installation with Sunfixings mounting systems, especially the module clamps otherwise this will lead to cold welding, shown in the image below.







Cross Connector 13mm Spanner

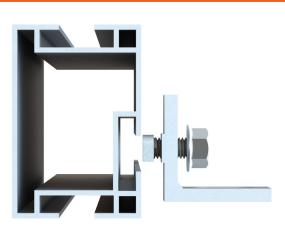



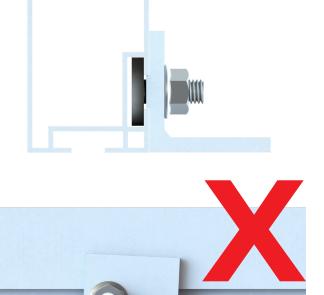

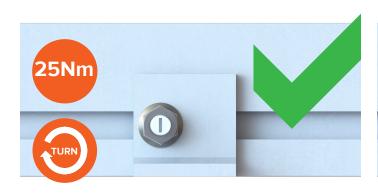



Cross Connection





